







ELLA DOUBLE BED FRAME

Assembly Instructions








Thank you for purchasing this quality Canningvale bed frame.



Please check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Hardware

a ₁	x20	b ₁	x20	c	x6
					
5/16*30mm		5/16*16mm			
a ₂	x2	b ₂	x2	d	x1
					
1/4*25mm		1/4*16mm		m5	


Parts

A		E	
Headboard	1PC	Center Support bar	1PC
B		F	
Side Rail	2PCS	Metal Leg Support	2PCS
C		G	
Footboard	1PC	Slat	1PC
D			
Metal Feet	4PCS		

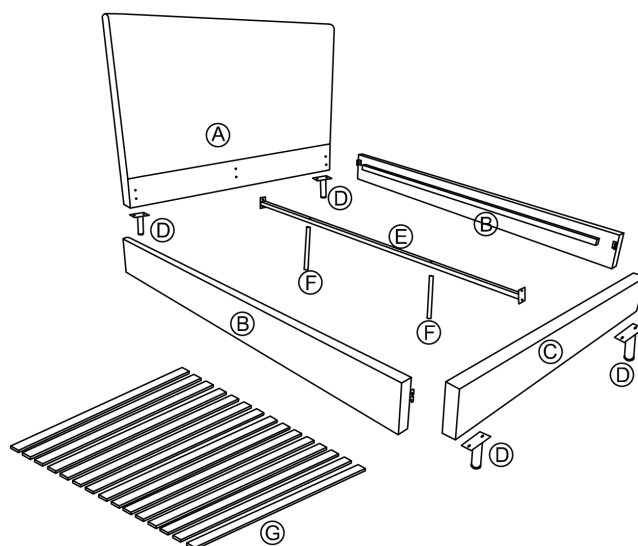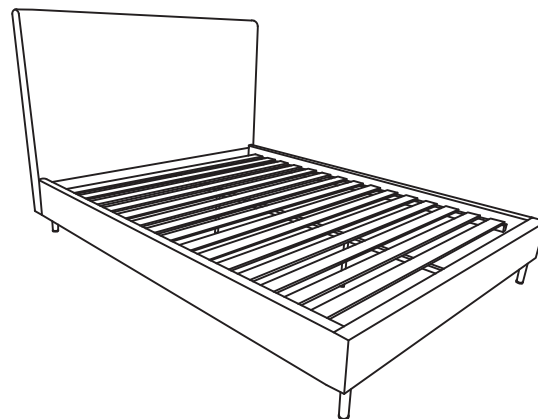


- As per figure 1 place the headboard, footboard & side rails on the ground to create an outline of the base.

Figure 1

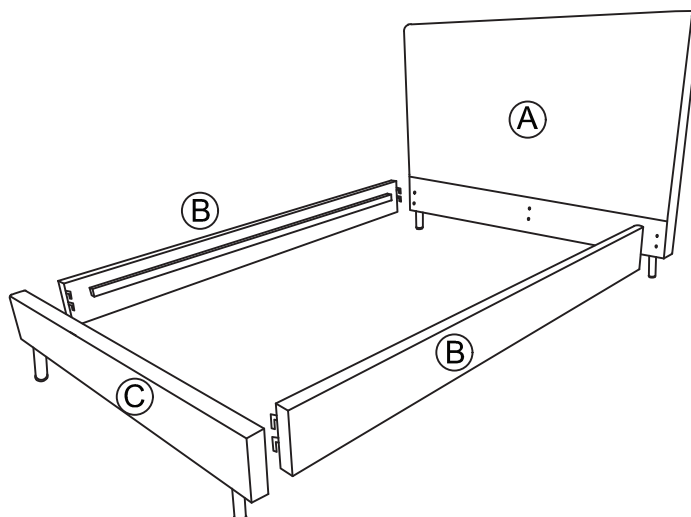


- Remove the screws already in place from the underside of the headboard, place feet in correct position and tighten the screws back into place. Then do the same thing with the footboard.

Figure 2

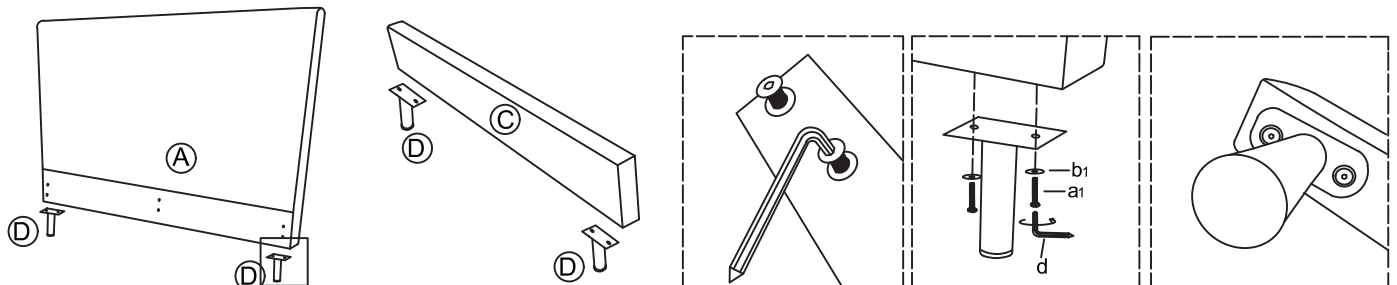


- Lean the headboard against the wall or have someone hold it upright for you. On the front of the headboard start to release the screws on the left-hand side but be sure not to remove them completely. Hook the left-hand side side-board onto the screws and tighten the screws back into place. Then do the same thing with the right hand side & side-board. Attach both side boards to the foot-board using the same technique.

Figure 3

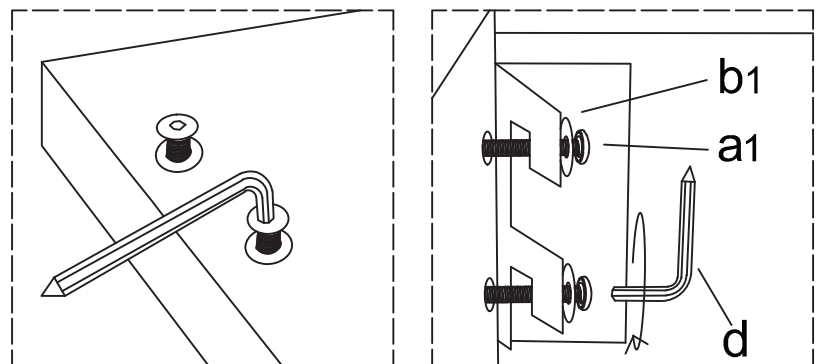


- On the centre support bar attach 2 x metal legs – one on each end of the bar using the provided screws.

Figure 4

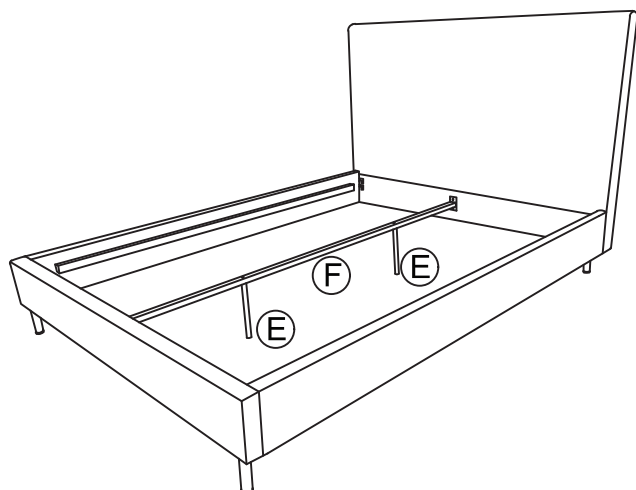


5. Remove screws from the middle of the headboard & footboard. Place the centre support bar in place and tighten the screws back in the slots. (Support legs should be 10mm away from the floor, these will touch the floor when the mattress is placed on the base).

Figure 5

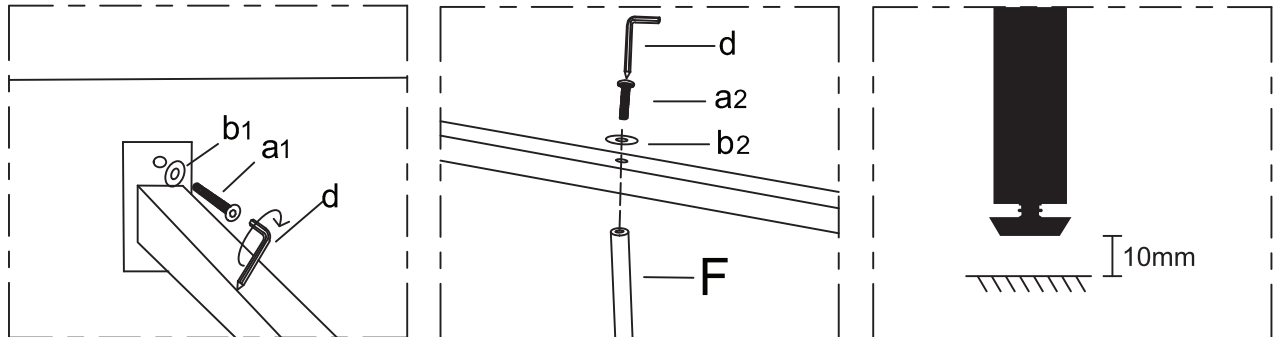

6. Carefully roll out the wooden slats over the base. Screw the wooden slats into the side boards pre-drilled holes with the provided screws. (There will be 6 in total. 2 x each side, 1 x each end). (step 4 bottom)

Figure 6

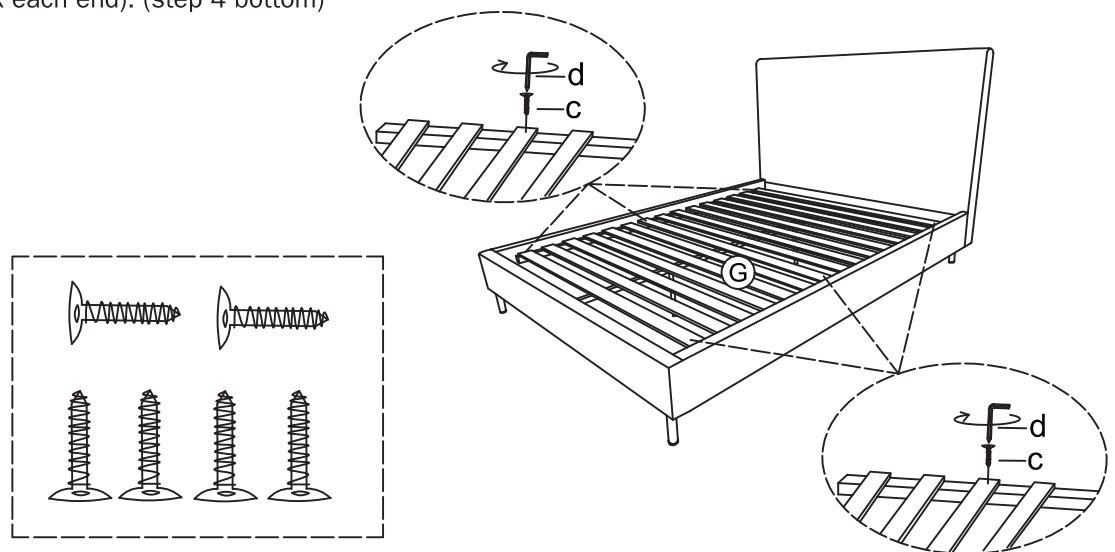

SAFETY ADVICE:

Please read these instructions carefully.

- We recommend laying down a sheet or blanket on the floor before assembling your bedframe. This will help to avoid scratching the product as well as the floor.
- Unpack the product carefully, inspect all parts and check that all parts are in the box remembering some parts are already attached to the actual product.
- We strongly recommend that children are not in the same room while the bed is being assembled as there are several parts that could become a choking hazard.

SAFETY WARNING:

Make sure all 4 feet are in direct contact with the floor.

GENERAL CARE:

- Vacuum the fabric on a regular basis to remove any dirt or dust.
- Spot clean with a wet cloth if required & avoid use of household cleaners.
- If you need to move this product into another room, please dismantle it first to prevent any damage.
- Always lift the pieces when they need to be moved, dragging, and pushing them will cause them to become damaged.